



7100 Technology Drive
West Melbourne, FL 32904
1-800-422-6281

Service Bulletin

BKSB-1039
Issue Date 6-16-2014

Issue: Selectable Power Setting Changes

Importance: For Information Only

Affected Models: KNG portable (2048 Ch.) and mobile radios upgraded from 4.6.2 to 5.1.0

Recommended Action: Change Selectable Power Setting per instructions below.

NOTE: THIS BULLETIN DOES NOT APPLY TO KNG-S MODELS, ONLY TO THE 2048 CHANNEL MODELS.


Issue Details:

If a channel in a previous firmware version was set to **Selectable**, then updating the firmware to Ver 5.1.0 will change the setting to **Sel Low**.

In NeoVision 1.5.0 with Firmware Version 4.6.2 the Mobile Radio has three power settings Low, High and Selectable.



In NeoVision 2.0.3 with Firmware Version 5.1.0 the Mobile Radio has four power settings Low, High, Sel Low and Sel High.

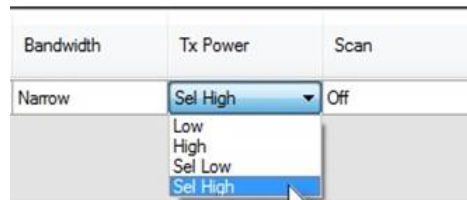

From firmware version 5.1.0 onward, the channel power may be set to any of 4 choices:

Low: The radio will always transmit at the power set in the Low Power dropdown list of the Global Conventional window.

High: The radio will always transmit at the power set in the High Power dropdown list of the Global Conventional window.

Sel Low: By default at reset, the radio will transmit at the power set in the Low Power list. However, you can switch it to High Power with a button, switch, or menu operation.

Sel High: This is the converse of **Sel Low**. By default at reset, the radio will transmit at the power set in the High Power list. Again, you can switch it to Low Power with a button, switch, or menu operation.